


9/1

FIG.2

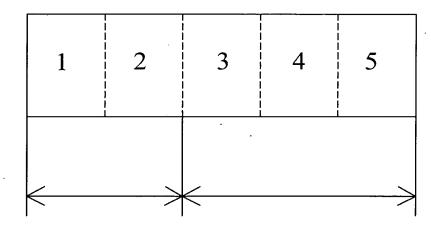

CODE FOR FREQUENCY CTCSS TONE CODE & DCD SELECTION CODE TABLE

FREQUENCY DIVIDED INTO COUNTRIES

FREQ. TABLE(KOR)		
CH FREQ. [MHz]		
01	448.7500	
02	448.7625	
03	448.7750	
04	448.7875	
05	448.8000	
06	448.8125	
07	448.8250	
08	448.8375	
09	448.8500	
10	448.8625	
11	448.8750	
12	448.8875	
13	448.9000	
14	448.9125	
15	448.9250	
16	448.9375	
17	448.9500	
18	448.9625	
19	448.9750	
20	448.9875	
21	449.0000	
22	449.0125	
23	3 449.0250	
24	449.0375	
25	449.0500	

FREQ. TABLE(U.S.A)		
CH	FREQ. [MHz]	
01	462.5625	
02	462.5857	
03	462.6125	
04	462.6357	
05	462.6625	
06	462.6857	
07	462.7125	
08	467.5625	
09	467.5875	
10	467.6125	
11	467.6375	
12	467.6625	
13	467.6875	
14	467.7125	

EDEO TADI EOJEWZI ID			
FREQ. TABLE(NEWZL'D			
01	476.4250		
01 02	476.4500		
03	476.4750		
03	476.5000		
05	476.5250		
06	476.5500		
07	476.5750		
08	476.6000		
09	476.6250		
10	476.6500		
11	476.6750		
12	476.7000		
13	476.7250		
14	476.7500		
15	476.7750		
16	476.8000		
17	476.8250		
18	476.8500		
19	476.8750		
20	476.9000		
21	476.9250		
22	476.9500		
23	476.9750		
24	477.0000		
25	477.0250		
26	477.0500		
27	477.0750		
28	477.1000		
29	477.1250		
30	477.1500		
31 32	477.1750 477.2000		
32	477.2000		

FREQ. TABLE(AUS)			
CH	CH FREQ. [MHz]		
01	476.6250		
02	476.6500		
03	476.6750		
04	476.7000		
05	476.7250		
06	476.7500		
07	476.7750		
08	476.8000		
09	476.8250		
10	476.8500		
11	476.8750		
12	476.9000		
13	476.9250		
14	476.9500		
15	476.9750		
16	477.0000		
17	477.0250		
18	477.0500		
19	477.0750		
20	477.1000		
21	477.1250		
22	477.1500		
23	477.1750		
24	477.2000		

FREQ. TABLE(TAIWAN)			
CH	FREQ. [MHz]		
01	467.5125		
02	467.5250		
03	467.5375		
04	467.5500		
05	467.5625		
06	467.5750		
07	467.5875		
08	467.6000		
09	467.6125		
10	467.6250		
11	467.6375		
12	467.6500		
13	467.6625		
14	467.6750		

Γ	FREQ. TABLE(SINGAPOL)			
	CH	FREQ. [MHz]	CH	FREQ. [MHz]
Г	01	433.8000	06	433.9250
	02	433.8250	07	433.9500
	03	433.8500	08	433.9750
	04	433.8750	09	434.0000
	05	433.9000	10	434.0250

477.1750 477.1750 477.2000 477.2250

477.2500

477.2750

477.3000

477.3250 477.3500 477.3750 477.4000

33

34 35

36

37

38 39

FIG.4

CTCSS TONE CODE TABLE			
NO	NO TONE PREQUENCY [Hz]		
000	NO CTCSS		
001	67.06		
002	69.37		
003	71.84		
004	74.33		
005	76.99		
006	79.65		
007	82.50		
008	85.34		
009	. 88.62		
010	91.38		
011	94.88		
012	97.46		
013	99.87		
014	103.39		
015	107.17		
016	110.85		
017	114.80		
018	118.60		
019	123.12		
020	127.50		
021	131.67		
022	136.69		
023	141.48		
024	145.96		
025	151.45		
026	156.59		
027	162.10		
028	168.01		
029	173.43		
030	180.21		
031	186.46		
032	193.16		
033	202.88		
034	206.78		
035	210.84		
036	217.96		
037	225.58		
038	233.75		
039	242.54		
040	250.06		

FIG.5

	DCD CODE TABLE			
NO	CODE	NO	CODE	
000	NO DCD	541	306	
501	023	542	311	
502	025	543	315	
503	026	544	331	
504	031	545	343	
505	032	546	346	
506	043	547	351	
507	047	548	364	
508	051	549	365	
509	054	550	371	
510	065	551	411	
511	071	552	.412	
512	072	553	413	
513	073	554	423	
514	074	555	431	
515	114	556	432	
516	115	557	445	
517	116	558	464	
518	125	559	465	
519	131	560	466	
520	132	561	503	
521	134	562	506	
522	143	563	516	
523	152	564	532	
524	155	565	546	
525	156	566	565	
526	162	567	606	
527	165	568	612	
528	172	569	624	
529	174	570	627	
530	205	571	631	
531	223	572	632	
532	226	573	654	
533	243	574	662	
534	244	575	664	
535	245	576	703 712	
536 537	251 261	577	712	
537		578 579	723	
538	263 265	580	731	
540	265 271	580	732 734	
340	2/1	581	743	
			743 754	
	L	583	/ 34	

